


Step-by-Step Instructions to Disassemble a Vacuum

Product Box

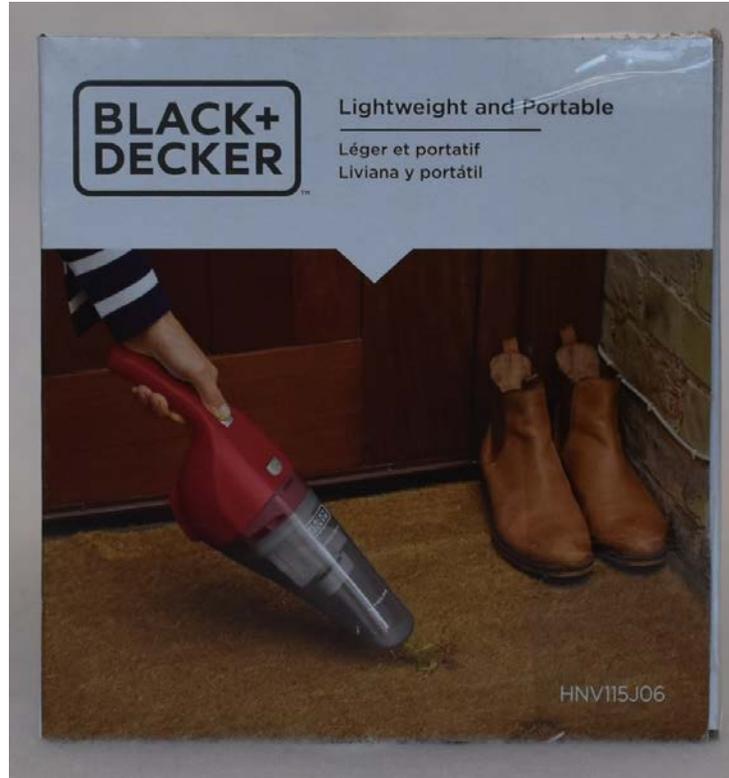


Product Box



Open Box



Remove User's Guide From Box

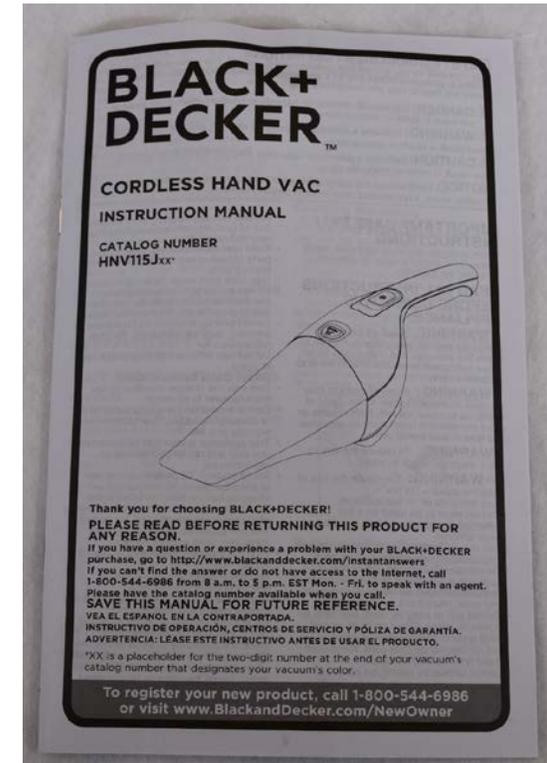


Remove Vacuum



Remove Power Cord



Remove Vacuum From Packaging

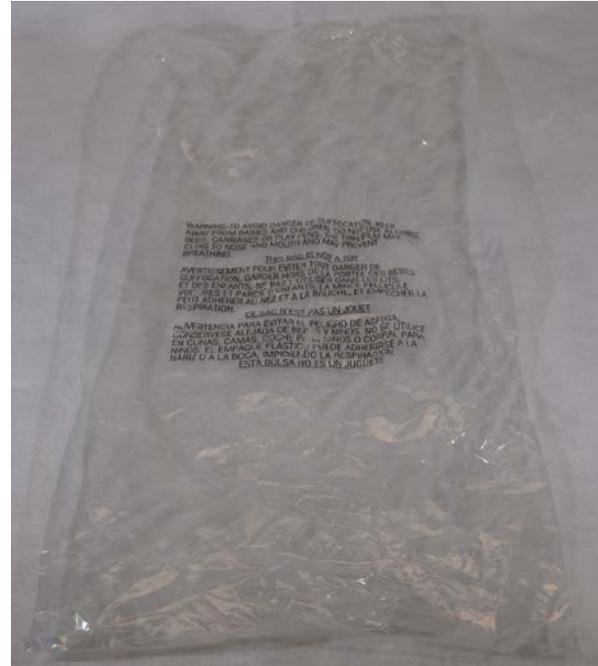

Remove Sticker From Vacuum Handle



Remove Filter




Remove Dust Collector



Remove Filter Plug



Remove Filter Plug Seal

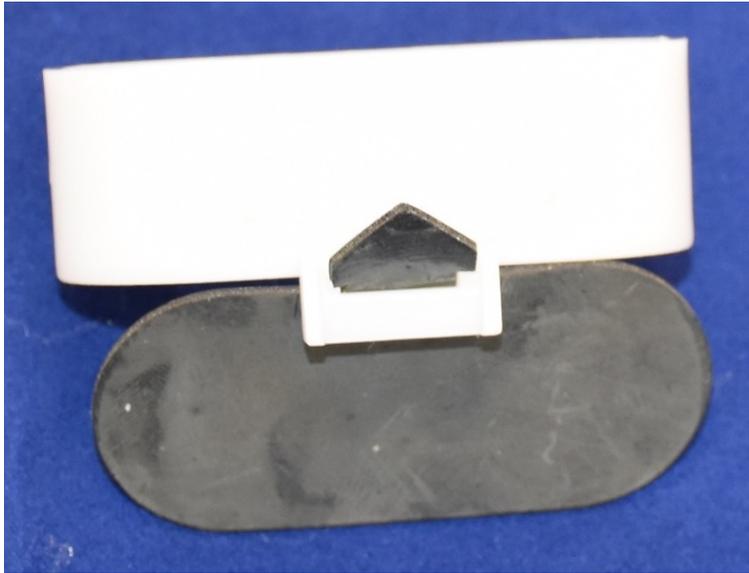

Disassemble Motor Housing




Disassemble Motor Housing





Disassemble Motor Housing




Disassemble Motor Housing

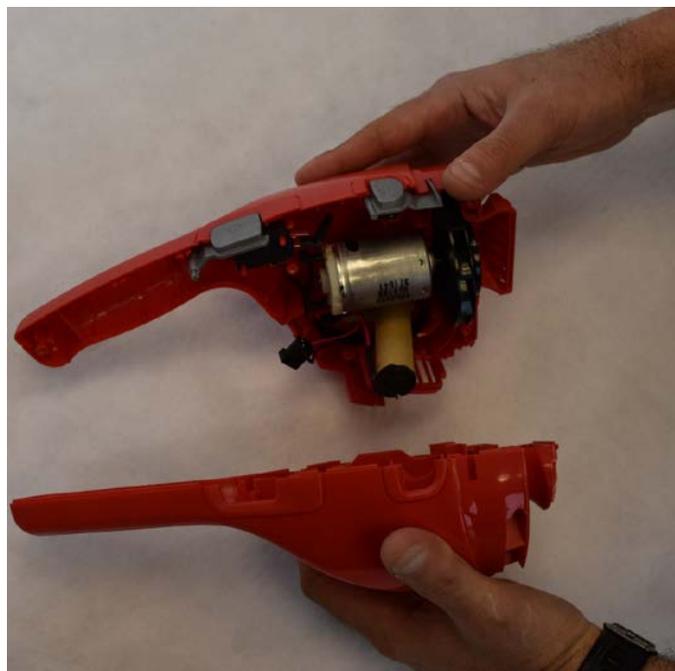


Remove Filter Release Latch

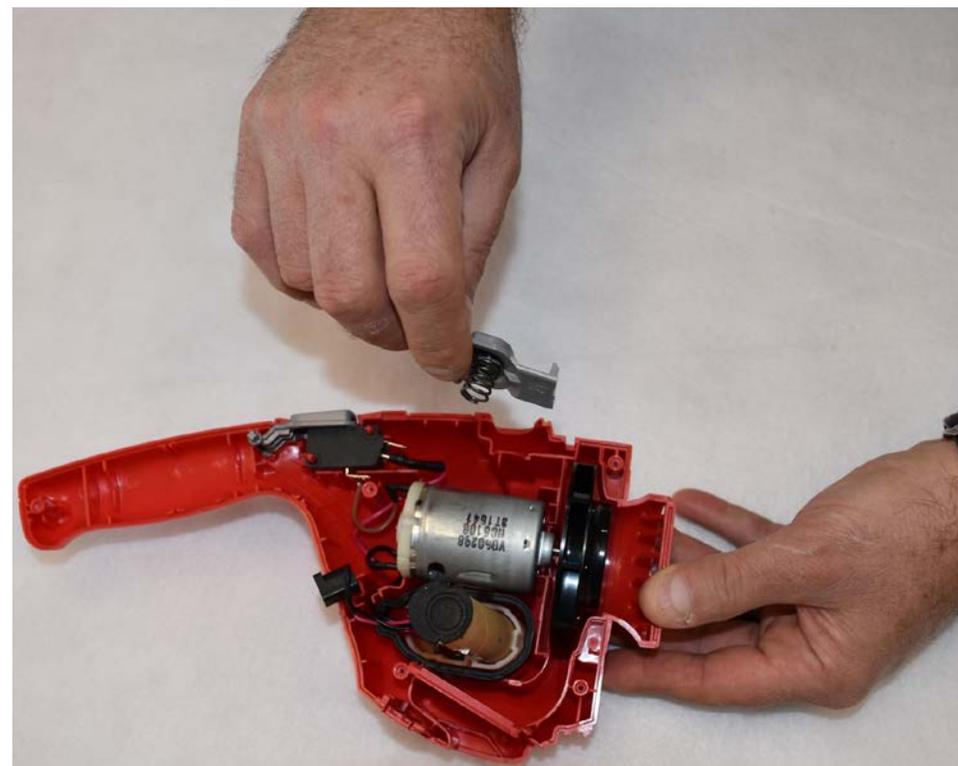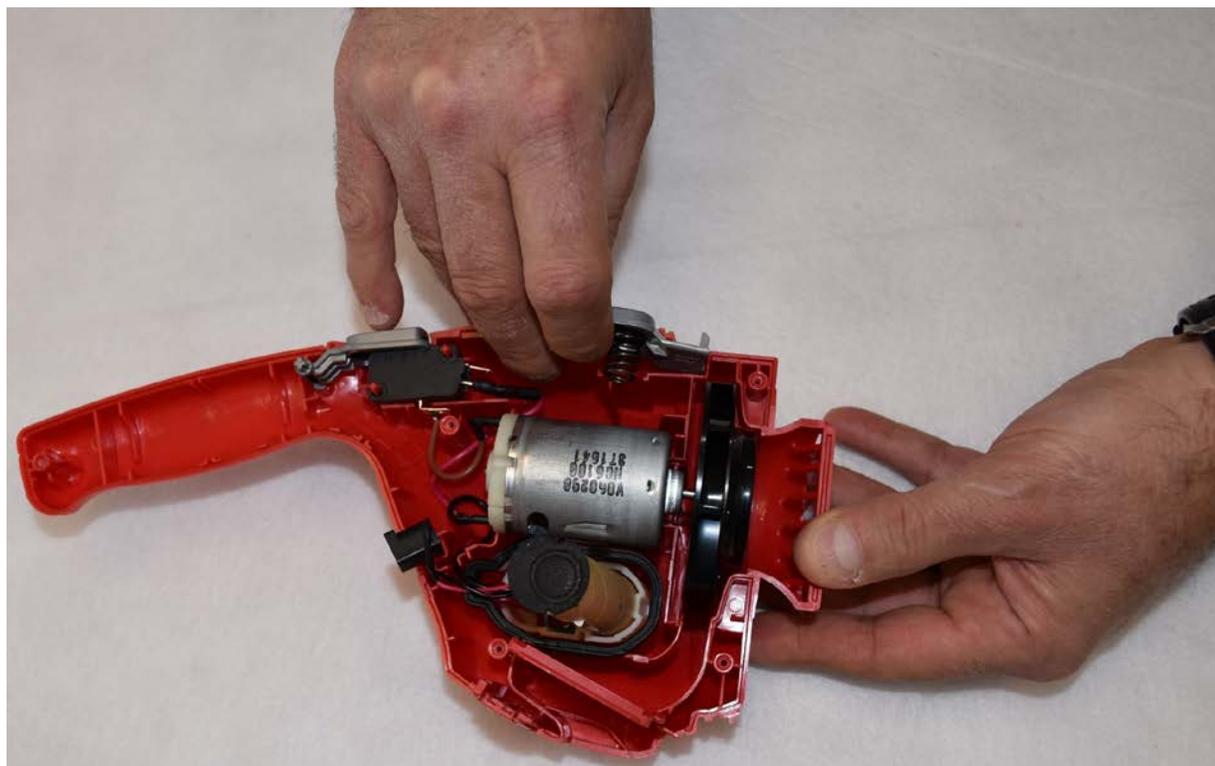

Disassemble Filter Release Latch

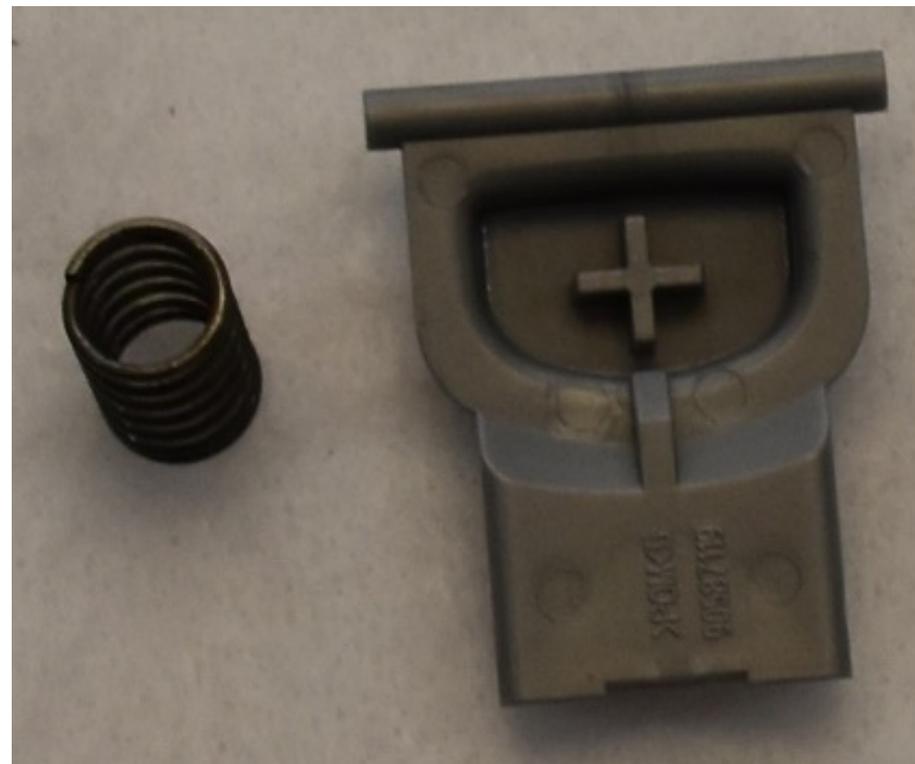




Remove Power Button

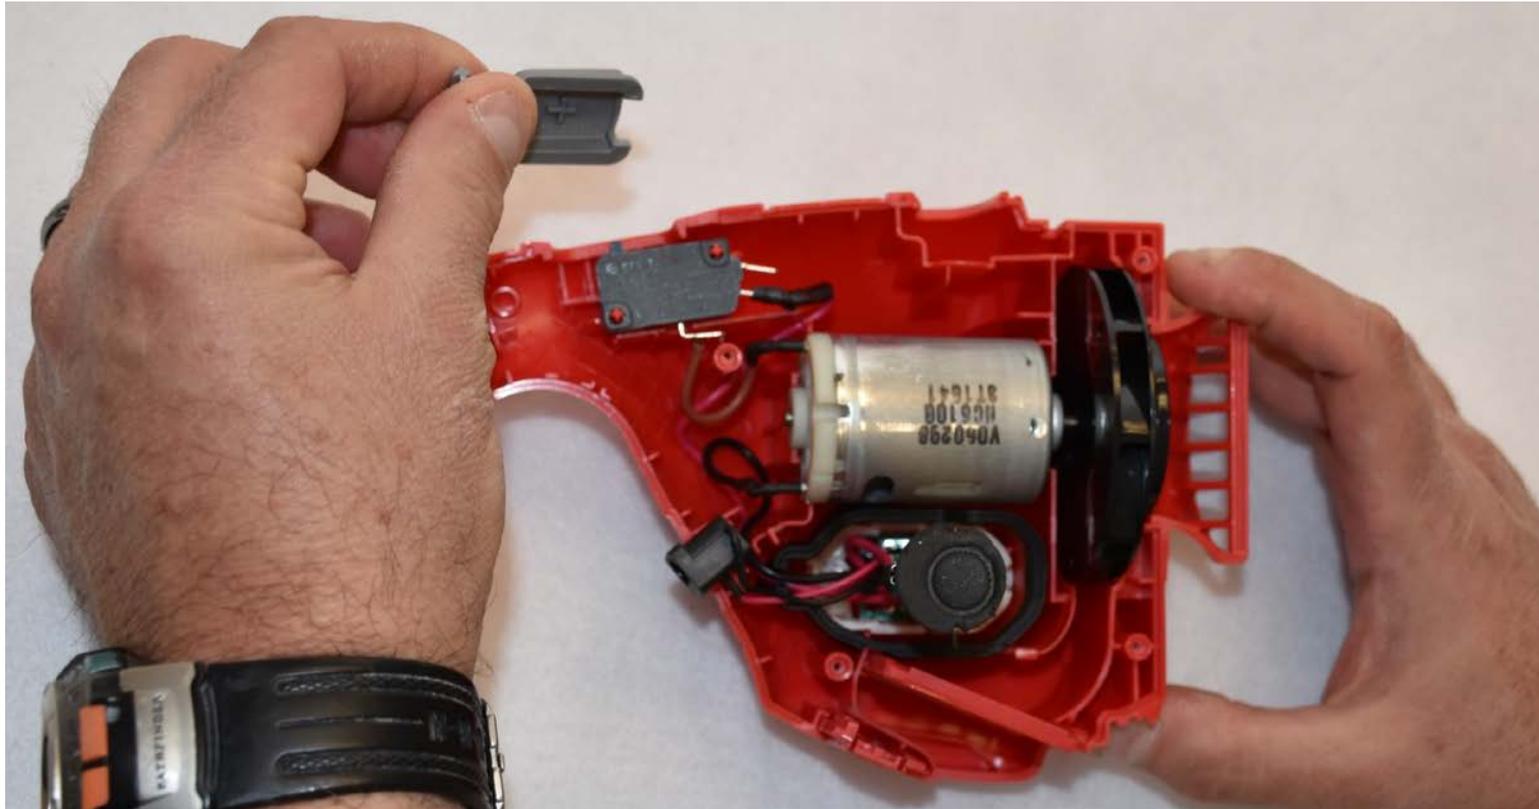

Remove Motor Assembly




Remove Motor Assembly

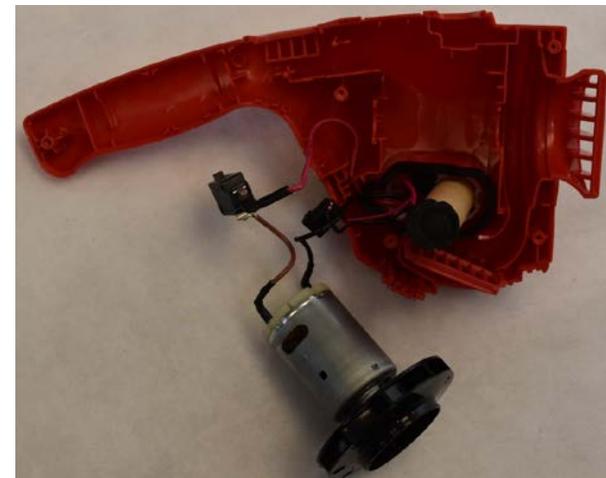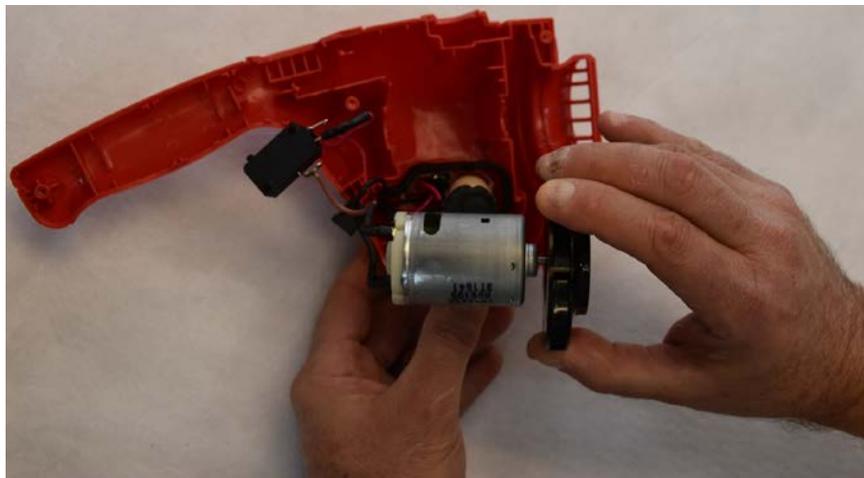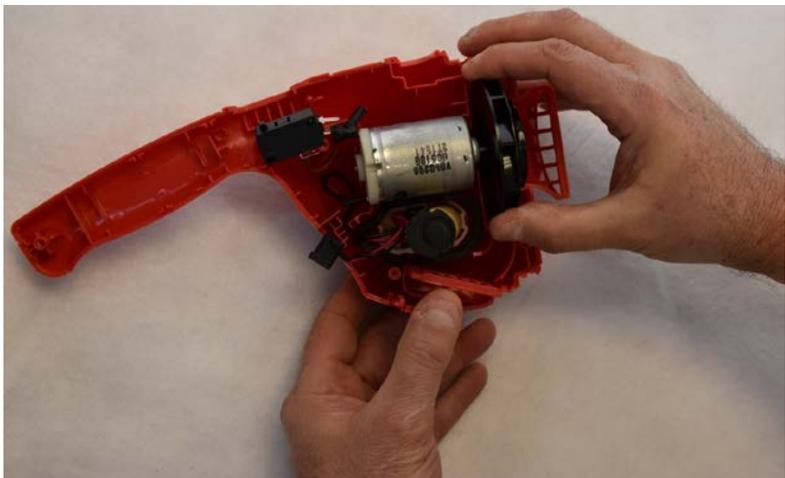


Remove Motor Assembly





Remove Motor Assembly

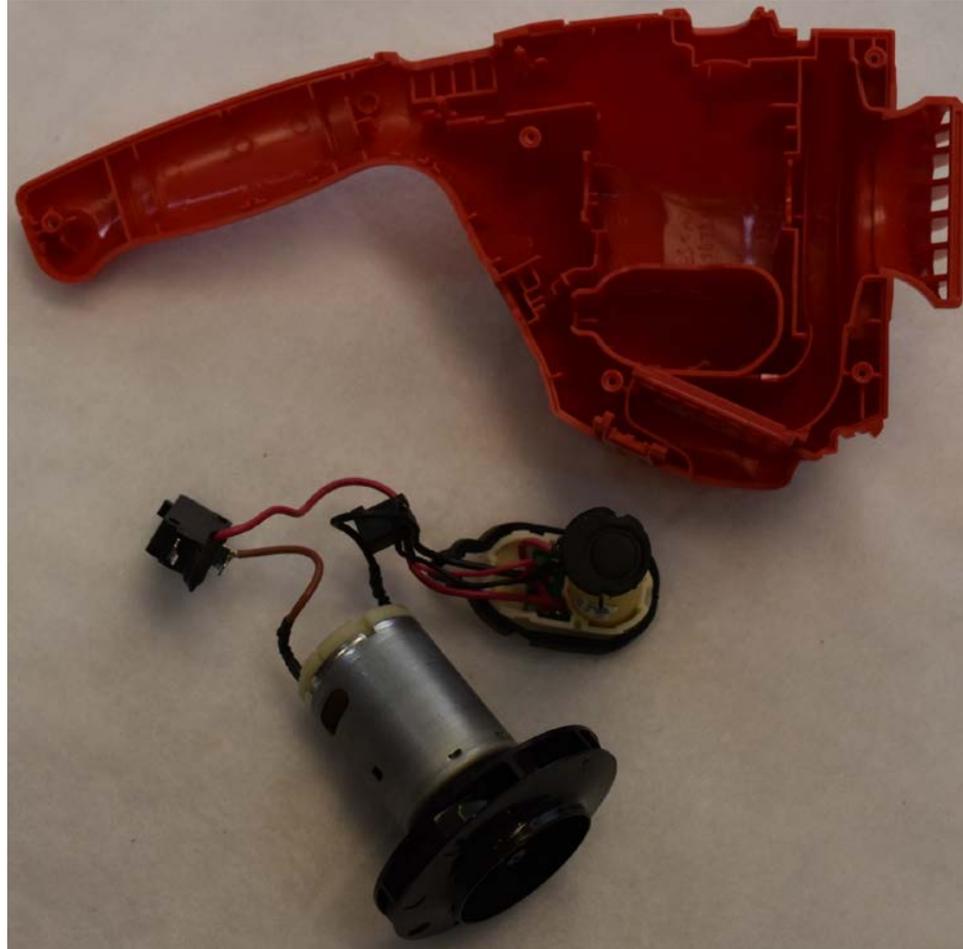


Additional Disassembly of Motor Housing

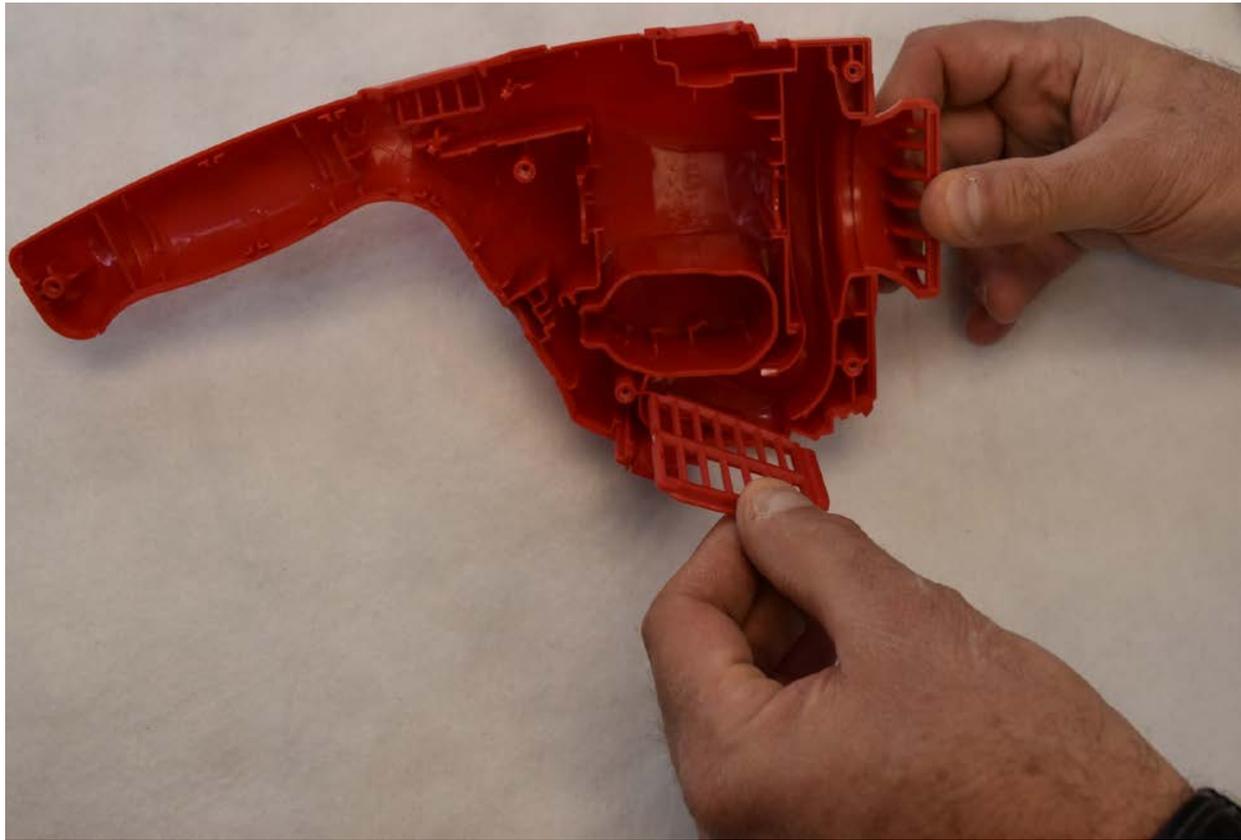


Additional Disassembly of Motor Housing

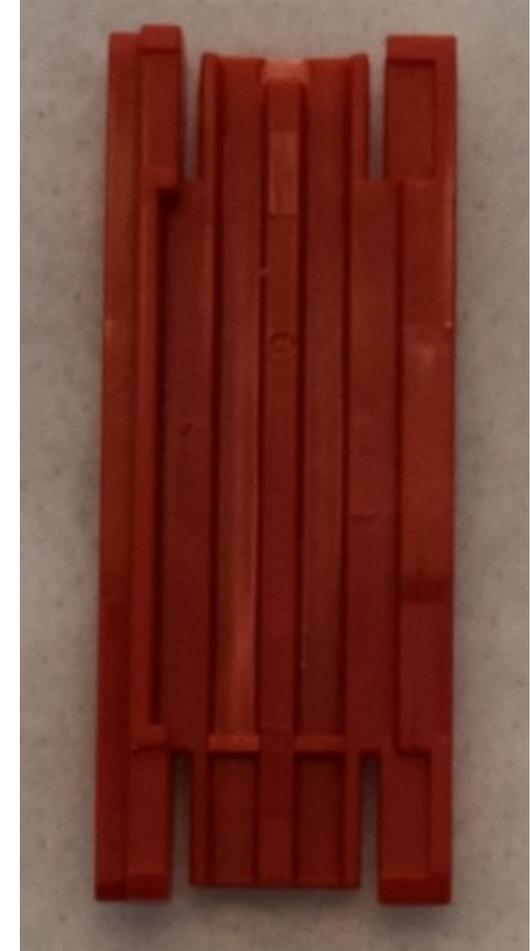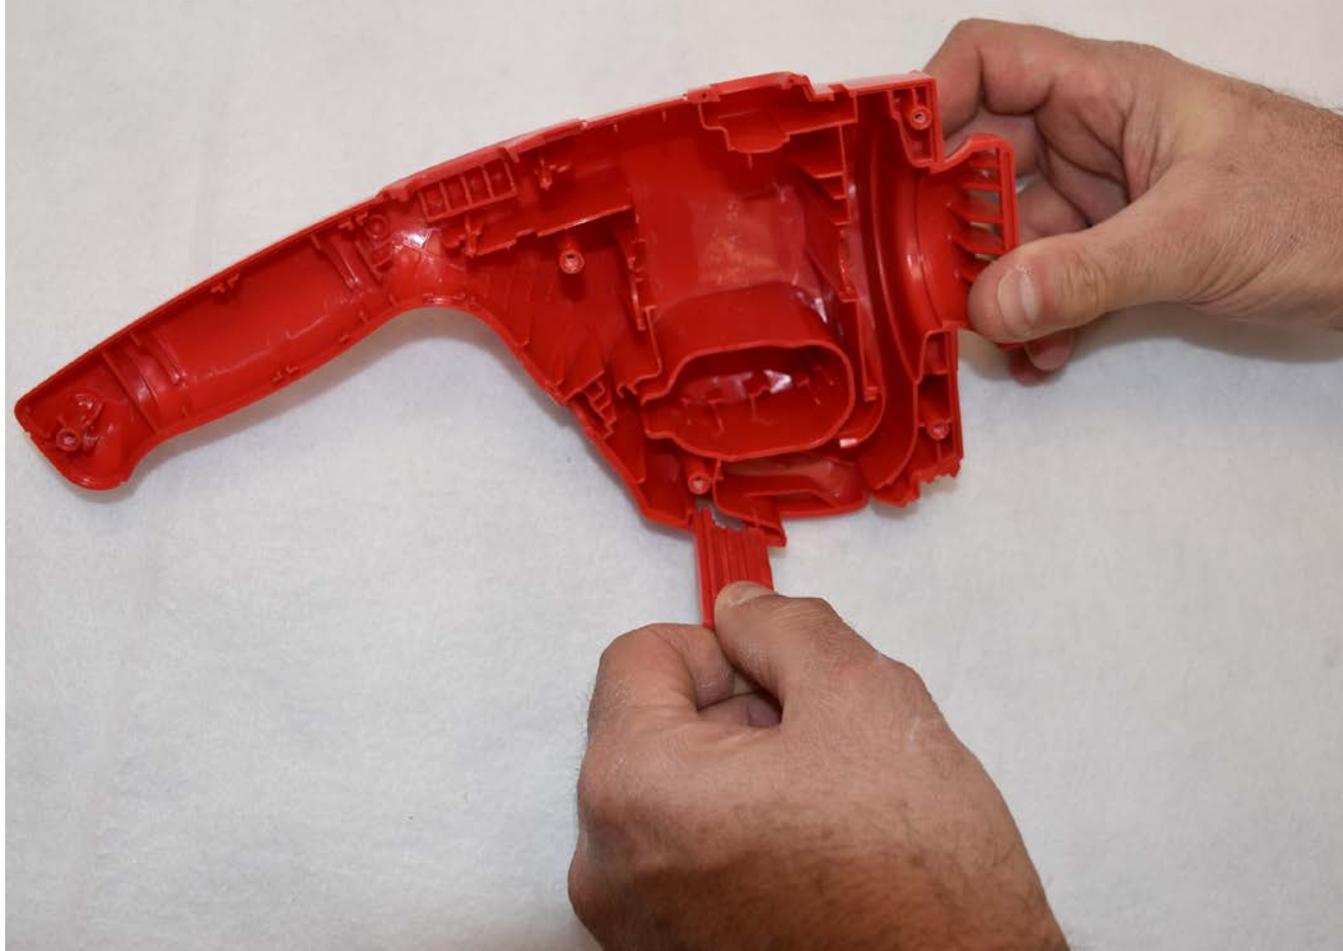


Additional Disassembly of Motor Housing

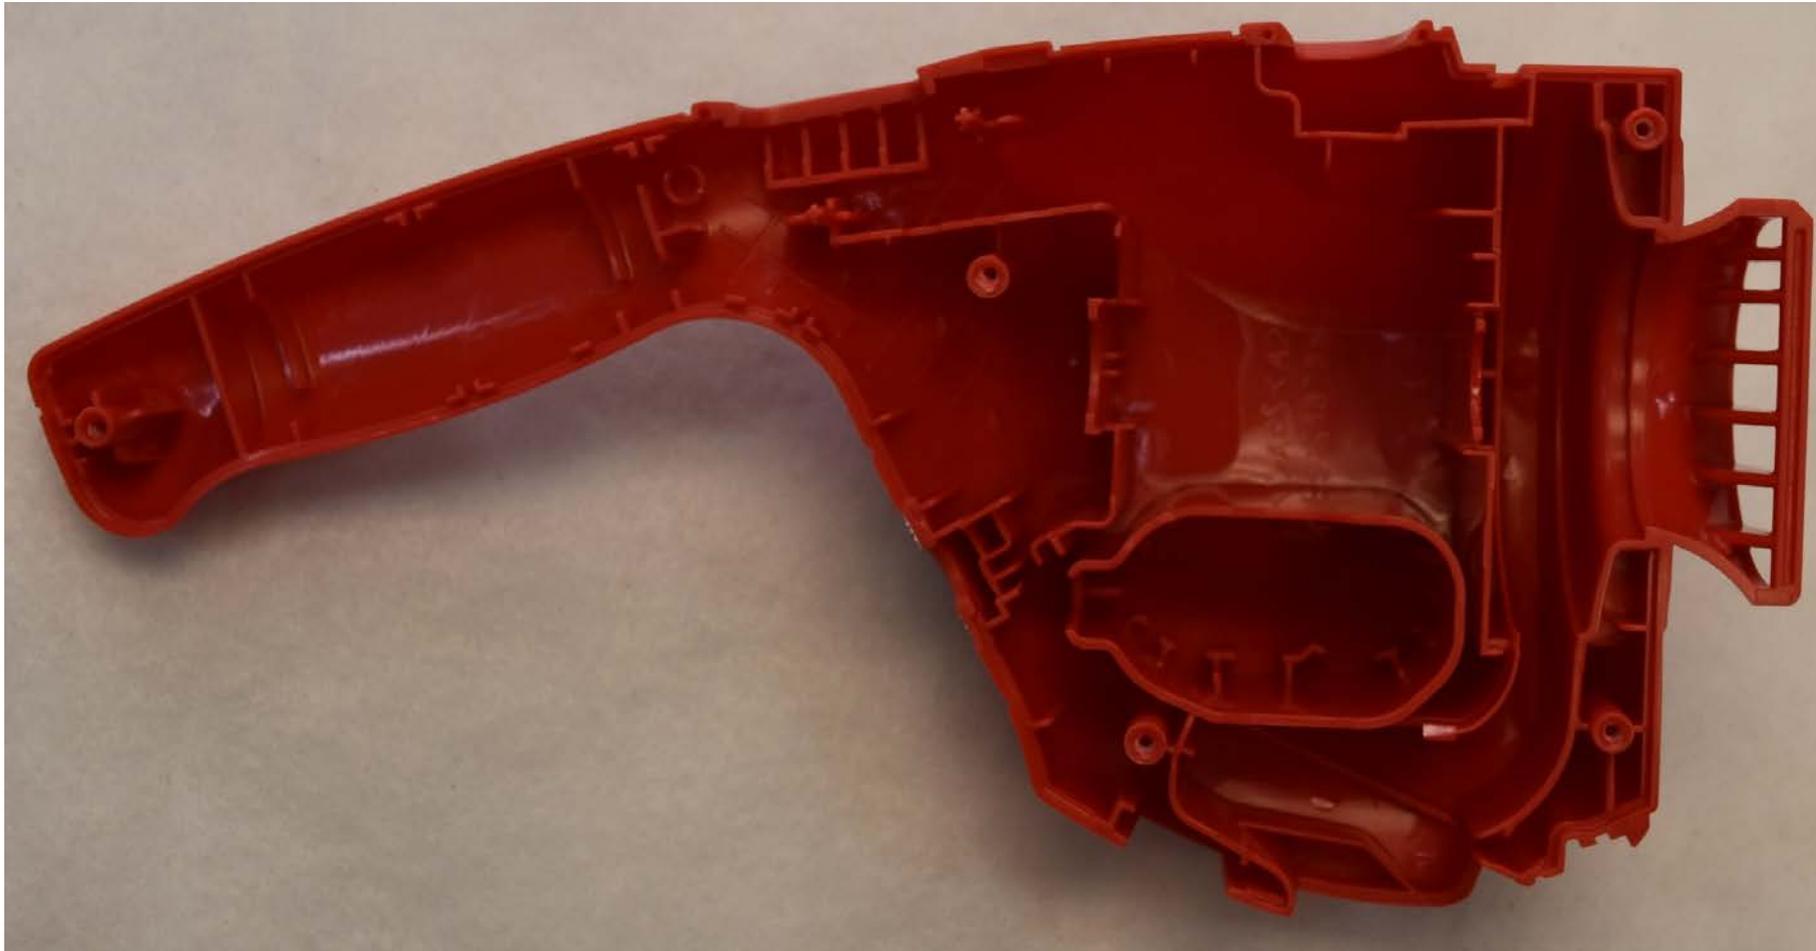

Remove Power Supply Seal

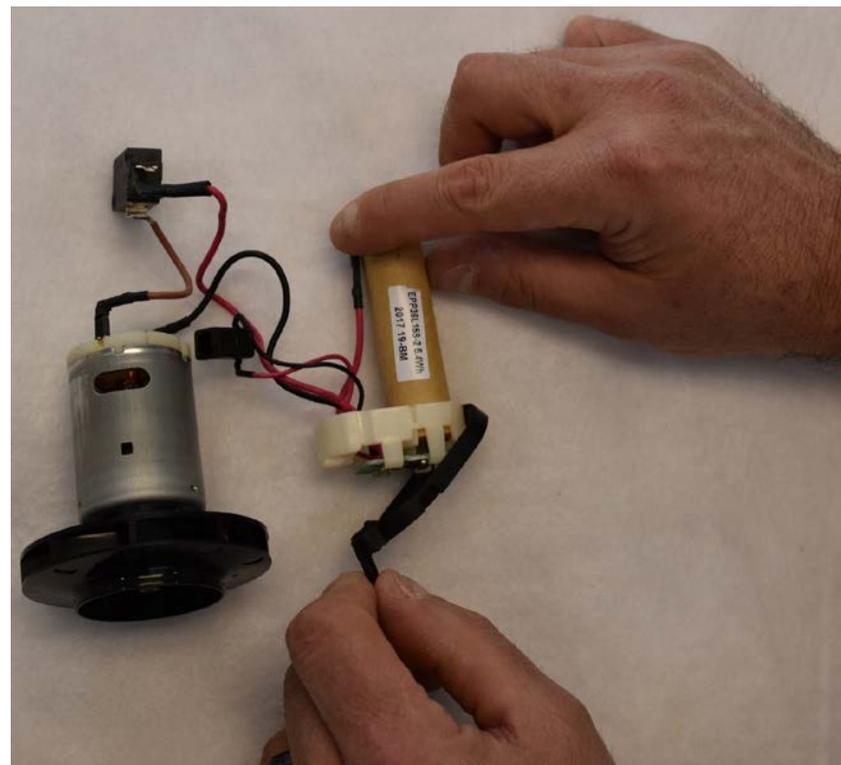


Disconnect Power Supply from Motor

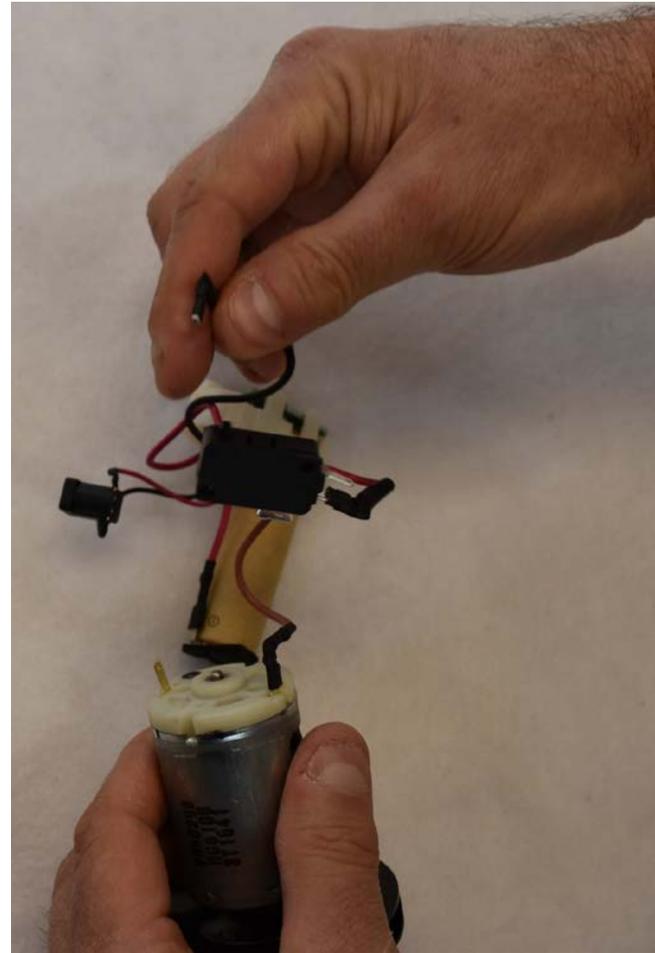

Disconnect Power Supply from Motor




Remove Motor Disk

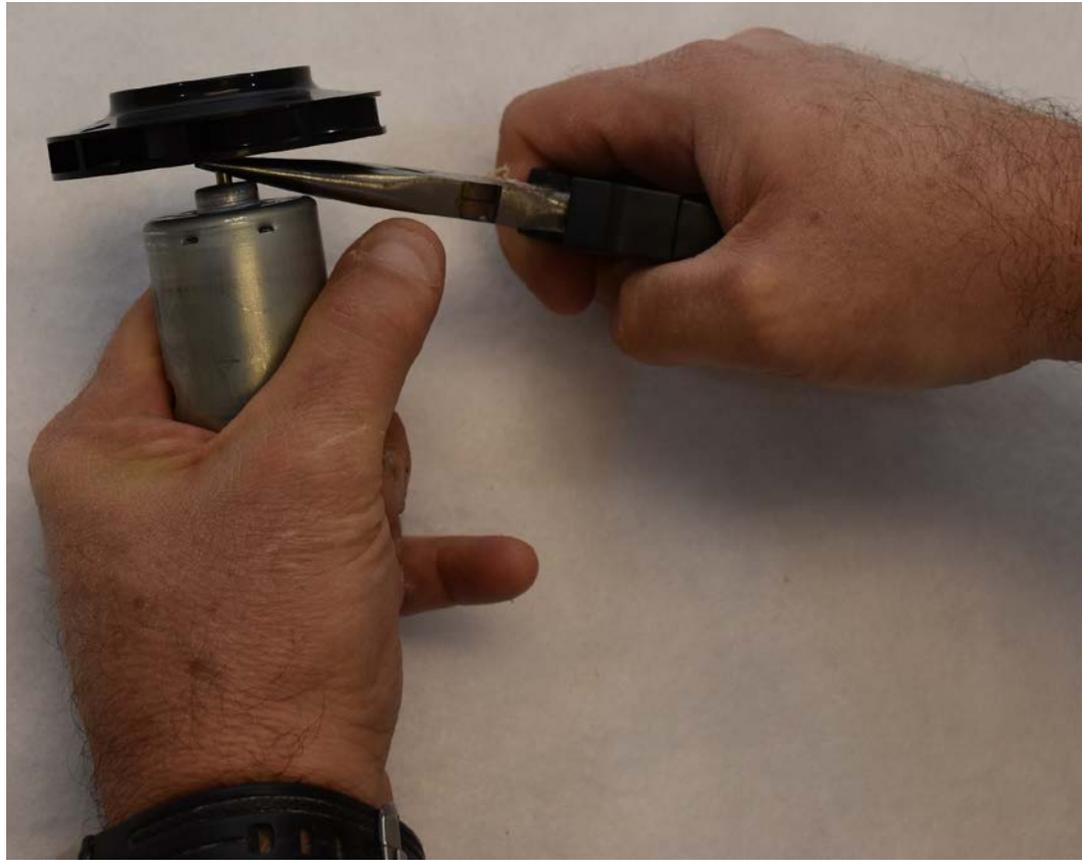



Remove Motor Disk





Remove Power Supply Terminals

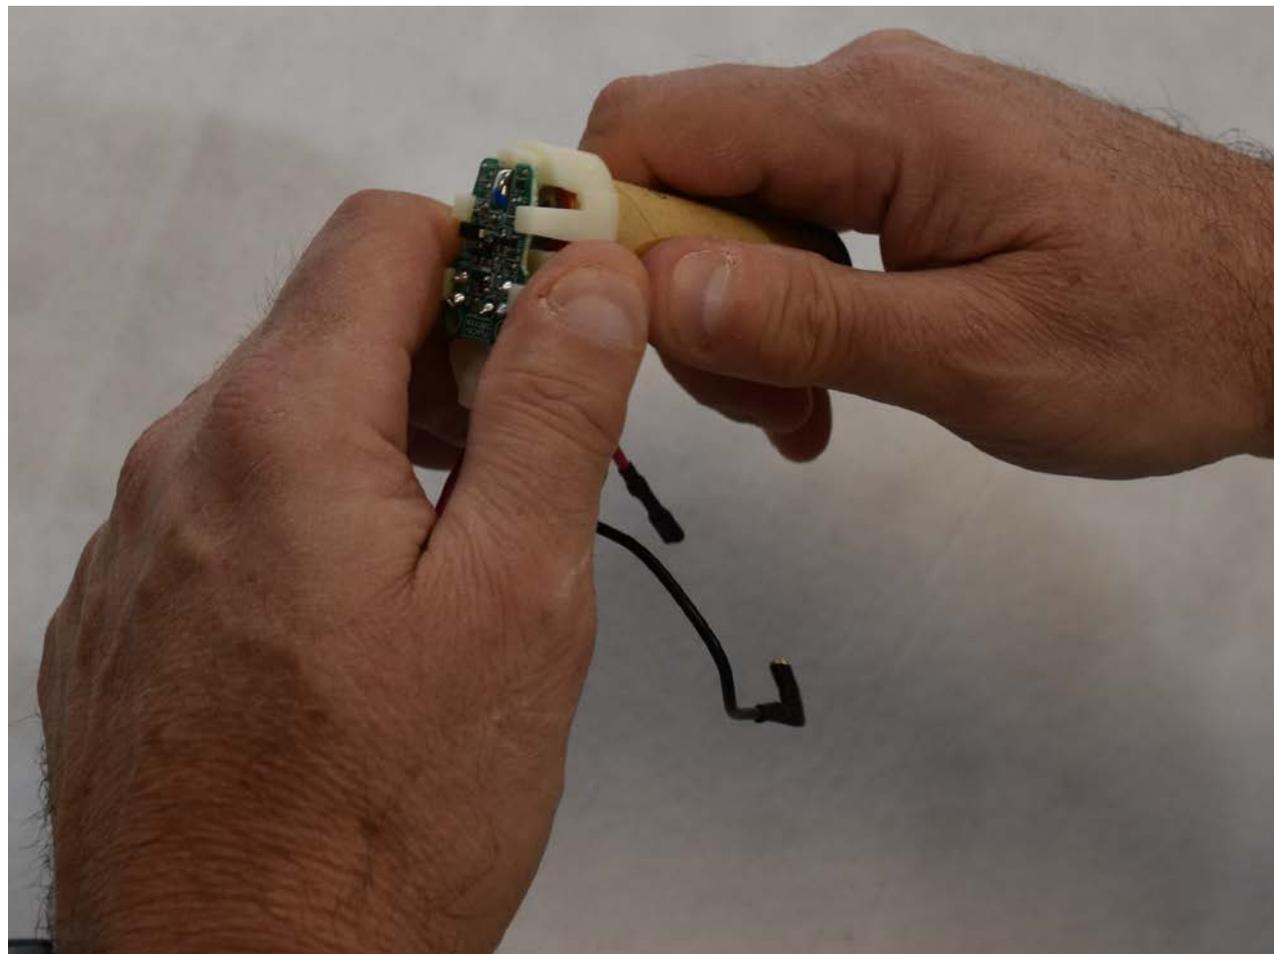


Remove Power Supply Terminals

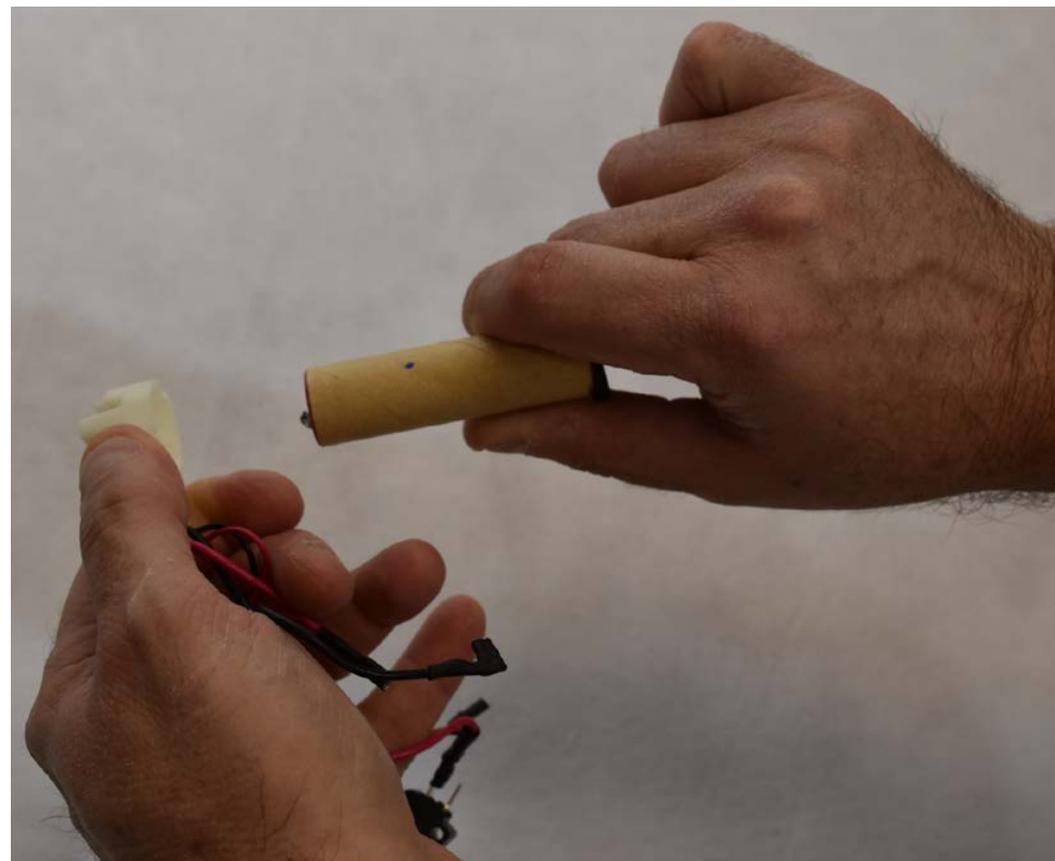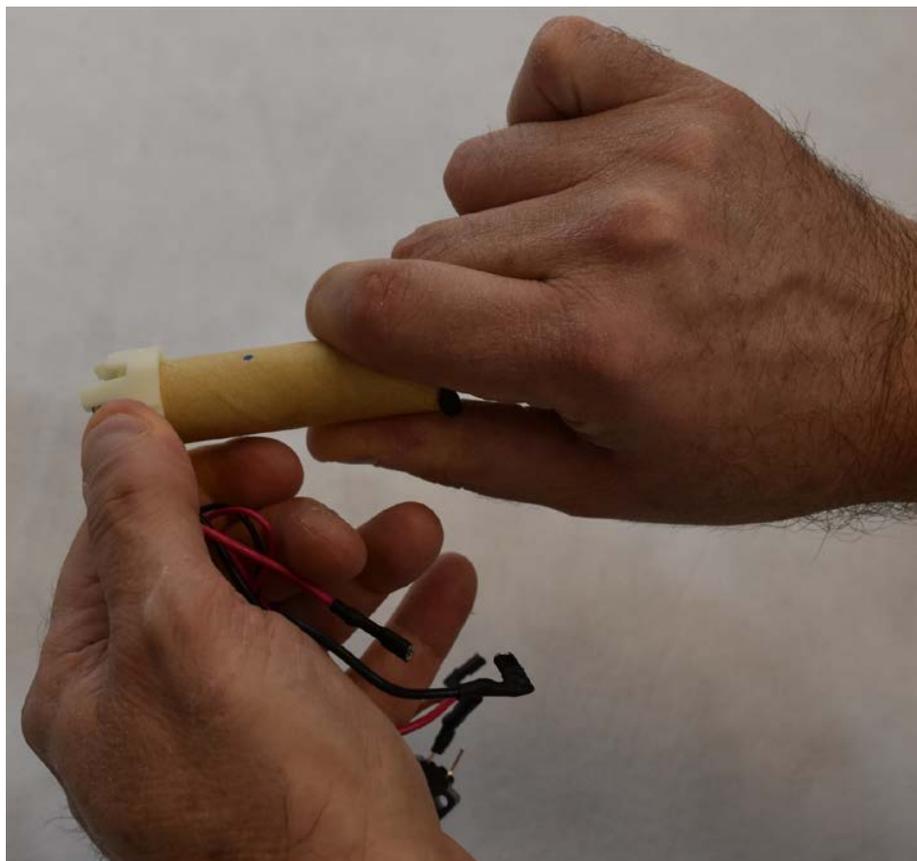



Remove Power Supply Terminals

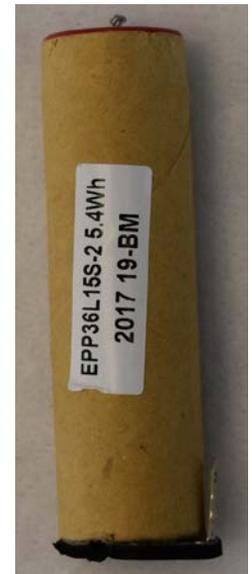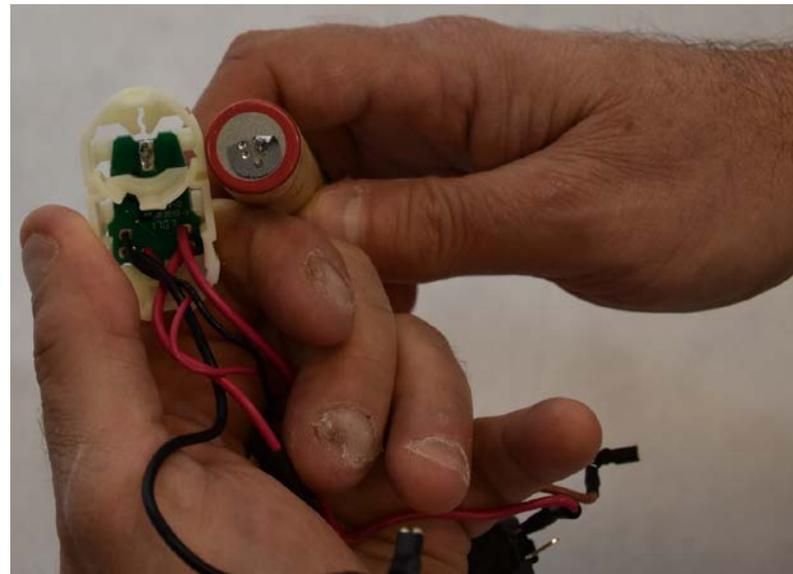



Disconnect Cable

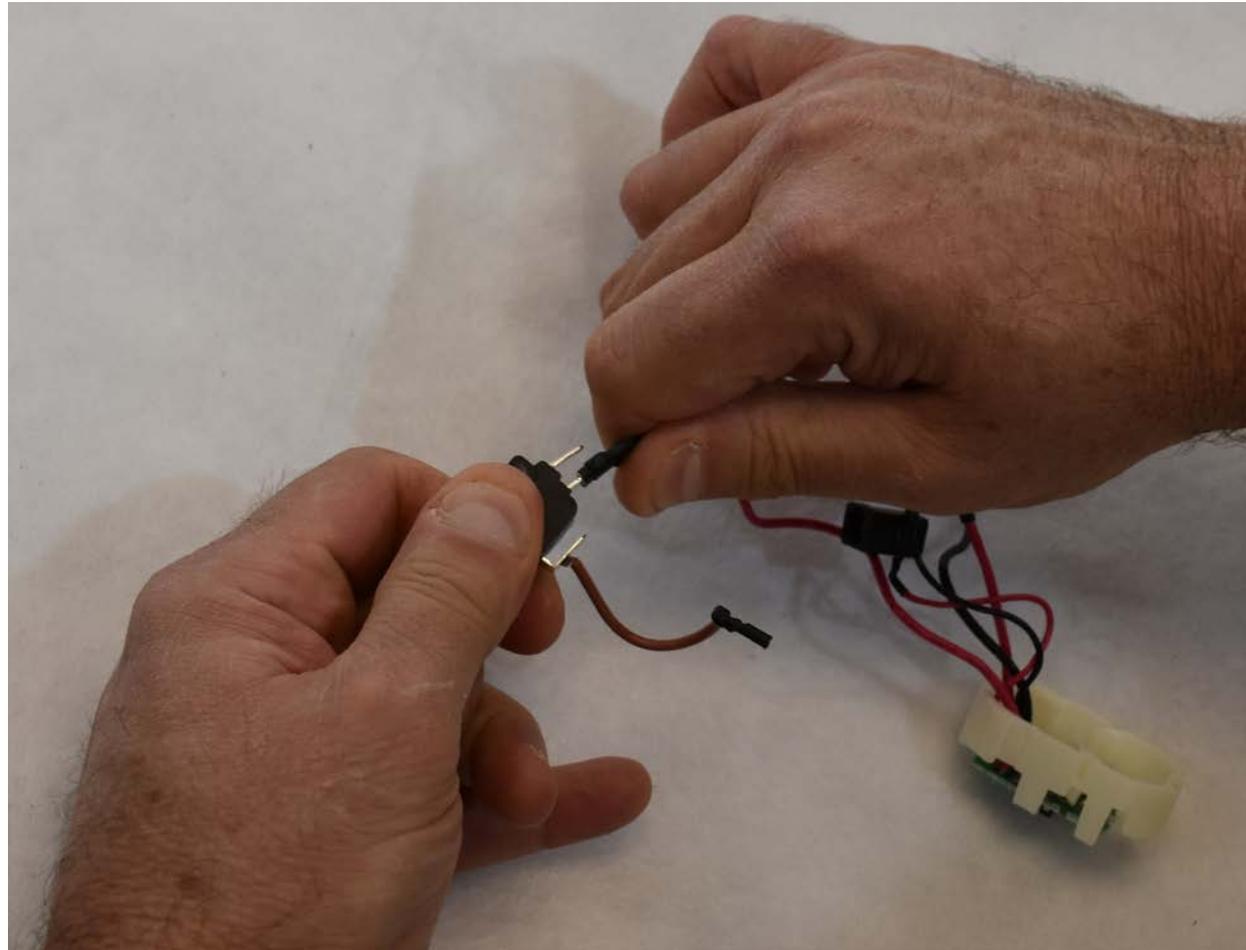



Disconnect Cable

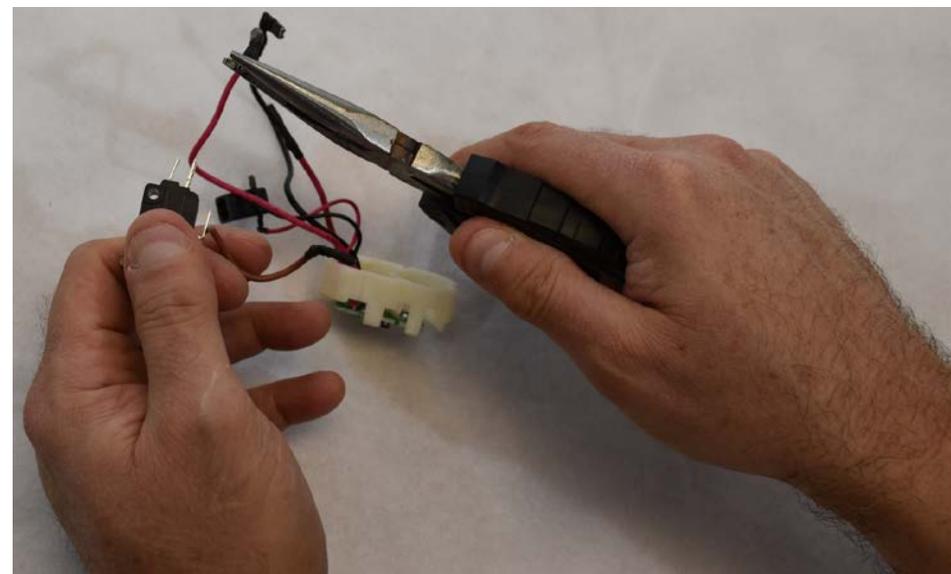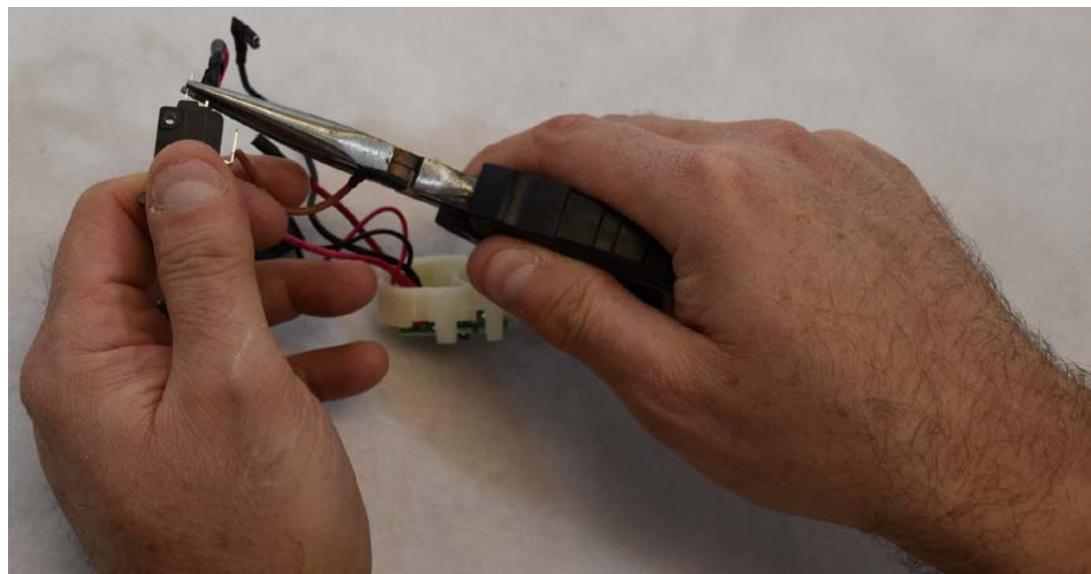

Remove Circuit Board

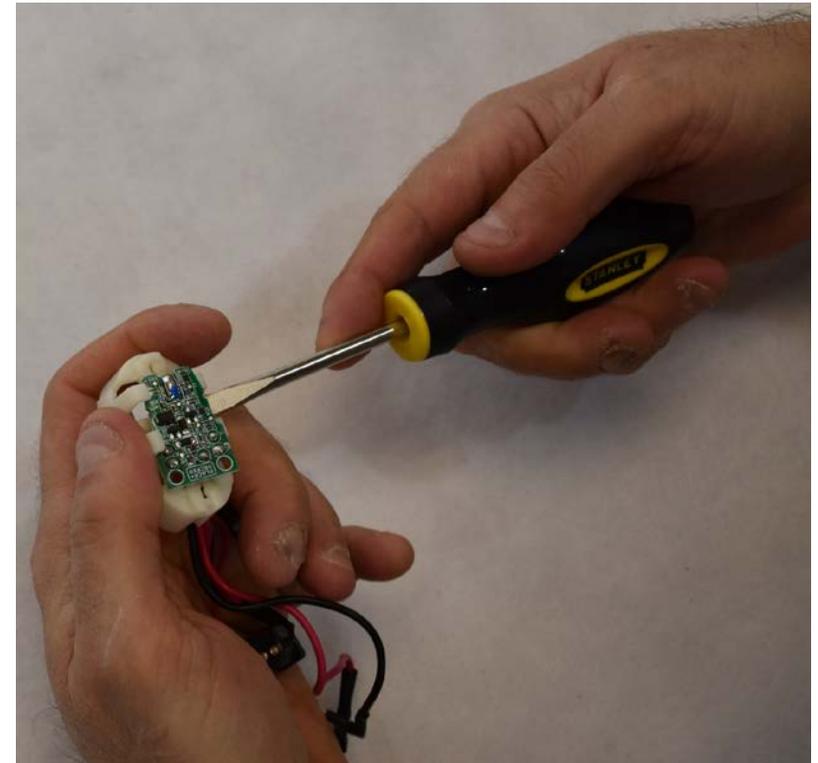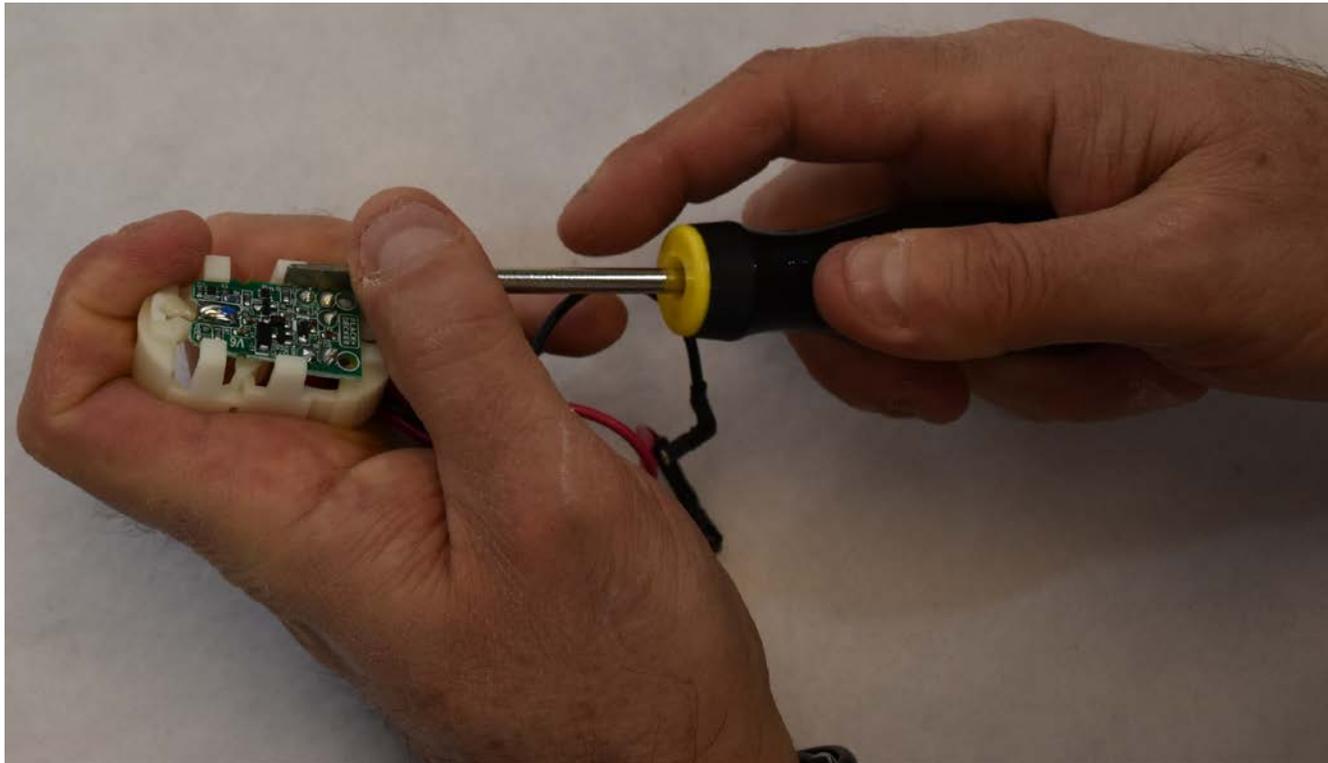

Remove Circuit Board

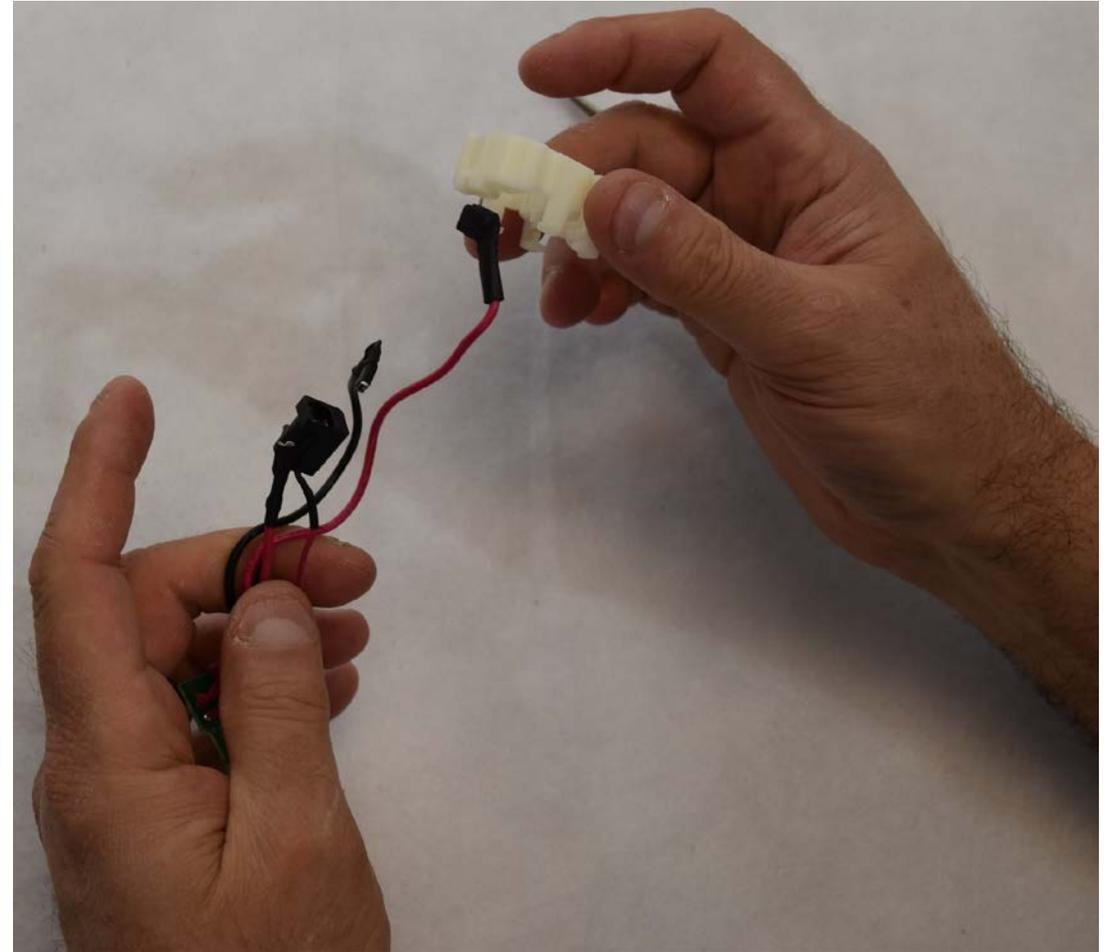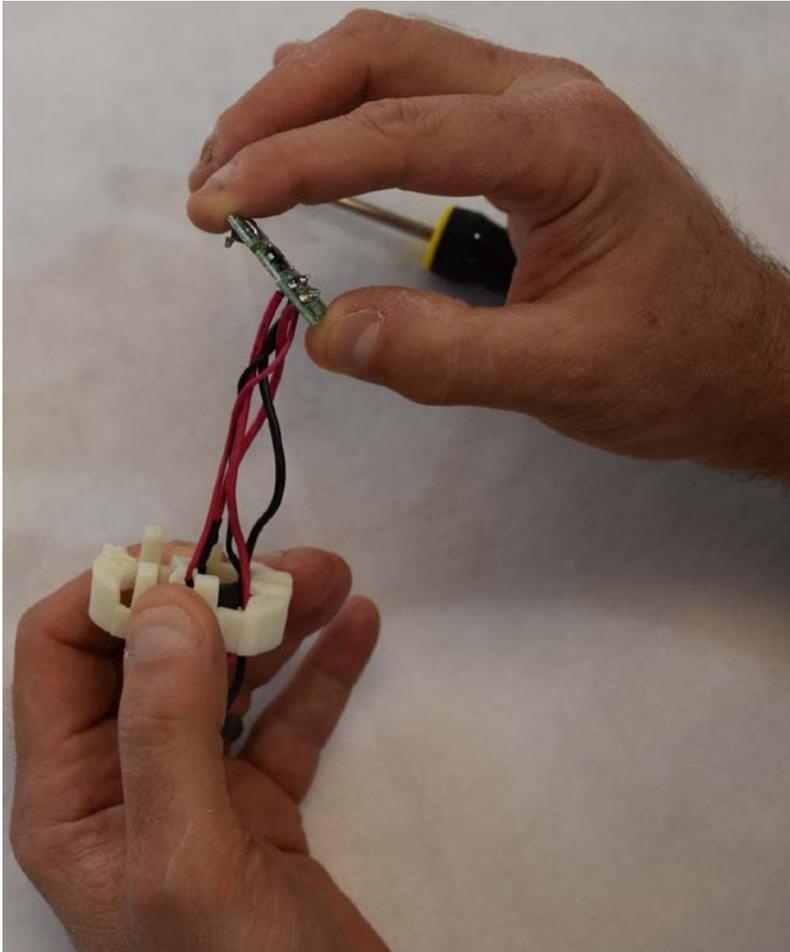

Remove Circuit Board

